


FVD- Brombacher Header O2 Sensor installation for Boxster/Cayman

This is an illustrated guide to locating and extending the oxygen sensor harness in order to install the FVD-Brombacher sport headers. The Boxster/Cayman supplies ample length from the factory installed harness and can be easily extended by unclipping both the pre and post catalytic sensor harness connectors from their mounted locations in the vehicle. Below you will find the location of all four sensor connections. The pre catalytic sensor connections are on the bulk head between the pass/engine compartment. The post catalytic connector wiring runs along both bank 1&2 cylinder head covers and routes to the rear cross member.

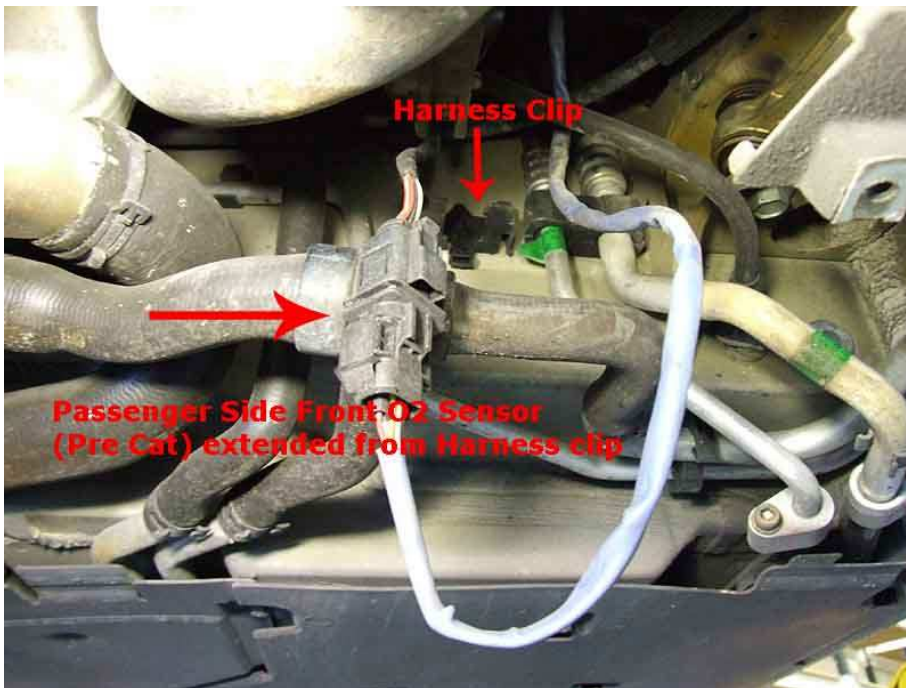





**Driver Side Rear O2 Sensor
(Post Cat) located on Rear
Cross Member Install
Position**



**Driver Side Rear O2
(Post Cat) Sensor
Harness on Rear
Cross Member**